

Sequence IIIG Information Letter 06-2 Sequence No. 11 August 18, 2006

ASTM consensus has not been obtained on this information letter. An appropriate ASTM ballot will be issued in order to achieve such consensus.

- TO: Sequence III Mailing List
- SUBJECT: 1. Procedural Enhancements from Unified Engine Build 2. Clarifications to Table A4
- 1. At the June 6, 2006 meeting of the Sequence IIIG Surveillance Panel, the panel approved a number of procedural enhancements identified as a result of the Unified Engine Build Workshop held earlier in the year. Sections 10.4.1, 10.5.3.1 (9 & 10) and 10.9.11.1 have been added and Sections 10.6.3, 10.13.3, 10.14.2, 10.18.1, 10.21, 10.25.7, 10.29 and 10.30 have been revised to reflect these enhancements. Also, several part number changes were necessary and Tables A2.1 and A2.2 have been revised accordingly. A summary of part number changes has also been attached for reference. The attached changes to Draft 2D of the Sequence IIIG test procedure are effective with the next reference test conducted in the laboratory.
- 2. On July 28, 2006, the Sequence III Surveillance Panel approved, via email ballot, inclusion of temperatures at which API Gravity and Density analyses are conducted and the units used in determining parts per million of Sulfur in Table A4 of the Sequence IIIG procedure. The revised Table A4 is attached. These changes are effective the date of this information letter.

dry 2 Clark

Sidney L. Clark Senior Contact Engineer GM Powertrain Materials Engineering

John Z. Jalar

John L. Zalar Administrator ASTM Test Monitoring Center

c: <u>ftp://ftp.astmtmc.cmu.edu/docs/gas/sequenceiii/procedure\_and\_ils/IIIG/IL06-2.pdf</u>

Distribution: Electronic Mail

Attachments

10.4.1 Clean the connecting rods by soaking in degreasing solvent (Warning-see Note-44) for a minimum of 2 h. Spray the rods with a 50/50 mixture of degreasing solvent and EF-411

10.5.3.1 Clean the block in a heated bath or temperature controlled automated parts washer before and after honing. Follow the suggested guidelines as listed below to ensure there is no rusting of the engine block after this process.

- 1) Use only NAT-50 or PDN-50 soap at a concentration of 16 pounds of soap per 100 gallons of water. The soap and water solution shall be changed at least every six months.
- 2) Set the temperature of the water to 140 degrees F.
- 3) Do not pre-condition the water that is being used in any way.
- 4) Prior to installing the engine in the parts washer, ensure that all coolant passages are blocked off to prevent cleaning solutions from entering the passages.
- 5) Allow the block to run through the cleaning cycle for a period of 30 to 40 minutes.
- 6) After the cycle is complete, immediately remove the block from the washer and spray it down with degreasing solvent.
- 7) Wipe cylinder bores out with a lint free towel.
- 8) Spray engine block with a mixture of 50/50 build-up oil and degreasing solvent.
- 9) Do not remove the paint dot from the crankcase area of the block
- 10) Allow the block to cool to room temperature before honing the block

10.6.3 Clean the cylinder heads according to the recommended engine block cleaning procedure (See 10.5.3.1) or clean with degreasing solvent. Spray the heads with a 50/50 mixture of degreasing solvent and EF-411. When cleaning the heads, do not remove the paint dot.

10.9.11.1 Allow the cylinder block to cool for a minimum of 10 min before taking final bore measurements.

10.13.3 <u>Installation of Camshaft Thrust Plate</u> – Lubricate the thrust plate with build up oil and install the thrust plate to the front of the engine using new  $Torx^{\text{(B)}}$  fasteners.

10.14.2 <u>Main Bearing Cap Installation</u> – Install the main bearing caps using new bolts for each test. Do not use the bolts from the new engine block for the first build, use new fasteners for the first build. Do not remove the phosphate coating from the bolts. Do not use air tools on the main bearing cap bolts to seat the caps. Install the bolts finger tight, and tighten them according to the procedure in 10.7.5.1. Use the main bearings as received.

10.18.1 <u>Piston Installation</u>- Clean pistons using degreasing solvent and air dry. Wipe the pistons with a lint free cloth prior to installation.

10.21 <u>Engine Front Cover</u>-Use a new front cover with each new engine block or if the oil pump gerotor housing is worn. Front covers can be used for as many as six tests. Remove any slag that may be present and debur the front cover prior to use.

10.25.7 Install new valve springs, part number OHT3G-059-1 (color code pink). Place the smaller diameter end of the spring against the retainer. Do not remove the factory paint dot from the valve spring.

10.29 <u>Pushrods</u>-Clean the pushrods with degreasing solvent, and air (Warning-see Note-45) blow them dry prior to installation; make certain that the oil passages are open. Wipe the pushrods with a lint free cloth prior to installation. Lubricate the ball ends of the pushrods with buildup oil and install the pushrods. See the Sequence IIIG Engine Assembly Manual section 6 sheet 2.

10.30 <u>Valve Train Loading</u>-Install the rocker arm pivot retainer and the precision roller rockers and torque the rocker arm pedestal bolts according to the Sequence IIIG Engine Assembly Manual section 6 sheet 4. Rocker arm pivot retainers can be used for up to six tests before being replaced.

## Table A2.1 Parts to be Replaced Every Test

PART DESCRIPTION	PART NUMBER
Arm, rocker with pivot bearing	OHT3F-058-1
Bearing, Kit, engine	OHT3F-042-2
Kit includes:	
Bearing, connecting rod, kit, upper and lower, OH-106 ASSY	3F042-01
Main bearing kit, OH101 ASSY, includes:	3F042-02
Bearing, balance shaft front (part of 24502388)	SKF6205-2ZNRJEM
Bearing, main, lower, No.1 and 3	OH-102
Bearing, main, lower, No. 4	OH-103
Bearing, main, lower, flange, No. 2	OH-104
Bearing, main, upper, flange, No.2	OH-105
Bearing, cam bushing, positions 1 & 4	3F028-09
Bearing, cam bushing, positions 2 & 3	3F028-10
Bolt, camshaft sprocket	24501366
Bolt, cylinder head, long	25527831 or 88891770
Bolt, cylinder head, short	25533811
Bolt, flywheel	24505092
Bolt, main cap	24503056
Bolt, main cap, side	24505576
Bolt, rear cover housing	24503970
Bolt, rocker arm, special test	3F-058-02
Bolt / Screw, thrust plate retainer	25519242
Camshaft, special test, including manganese-phosphate coating	OHT3F-008-8
Cap, valve spring retainer	24502257
Chain, timing	24504668
Clip, retainer, piston pin	OHT3F-012-1
Cooler, oil, nickel plated, bypass closed	OHT3F-030-2
Damper, timing chain (includes bolt, retaining ring)	24503893
Filter, pro tec	OHT3F-057-3
Gasket kit, intake manifold lower	89017399 or 89017816
Gasket, cylinder head, left	24503802
Gasket, cylinder head, right	24503802
Gasket, front cover	24502252
Gasket, nont cover Gasket, oil filter Adapter	25534742
Gasket, oil pan	OHT3G-093-1
Gasket, oil suction tube	24501259 or 12581570
Gasket, rear cover housing	24507388
Gasket, rocker cover	25532619
Gasket, water outlet	24502433
Gasket, water pump	24501565
Head, cylinder	24501505
Key, camshaft sprocket	245002200
Key, valve stem keeper	1016634
Lifter, test ACI w/Flat (25338738A)	OHT3F-029-3
Pin, piston wrist, pkg. of 6	OHT3F-014-1
Piston, test, runs 1 & 2, grade 12	OHT3F-053-1
Piston, test, runs 3 & 4, grade 34	OHT3F-054-1
Piston, test, runs 5 & 6, grade 56	OHT3F-055-1
Plate, camshaft thrust, 0.1520" thickness	OHT3F-035-1 OHT3F-011-2
Plug, engine block core hole	24500867
Plug, cylinder head core hole	3835577
Plug, cylinder head cup	24502262
Plug, engine block, oil gallery	3835577
Plug, ignition spark	NGK TR-6
Plunger, oil relief	
Pushrod, special length, pkg. of 12	25530949 OUT2E 007 1
Retainer clip, piston pin pkg. of 12	OHT3F-007-1 OHT3F-012-1
1 ea. ring, piston, run 1, engine set	OHT3F-050-RUN1
1 ea. ring, piston, run 2, engine set	OHT3F-050-RUN2
1 ea. ring, piston, run 3, engine set	OHT3F-051-RUN3
1 ea. ring, piston, run 4, engine set	OHT3F-051-RUN4
1 ea. ring, piston, run 5, engine set	OHT3F-052-RUN5
1 ea. ring, piston, run 6, engine set	OHT3F-052-RUN6
Rocker arm assembly (Includes: 3F058-02)	OHT3F-058-1
Rod, connecting (powdered metal)	12574505
Seal, crankshaft front oil (24504098)	OHT3G-092-1
Seal, crankshaft rear oil (25534760)	OHT3G-091-1
Seal, exhaust valve stem	OHT3F-061-1
Seal, intake valve stem	OHT3F-060-1
Spring, oil relief valve	1262505
Spring, valve special test (color code yellow)	OHT3F-059-5

Sprocket, Camshaft Valve, Exhaust (STF Va

24505306

Table A2.2	Parts	to	be	Replaced	As	Needed	(3	pages)
Valve, Exhaust (STD) Valve, Intake (STD)								12579949 12569550
Sprocket, Califshart								24303300

PART DESCRIPTION	PART NUMBER
Adapter, blowby breather tube	OHT3F-040-1
Adapter, oil filter	OHT3F-035-1
Adapter, throttle body, air inlet	OHT3F-001-2
Balancer, harmonic (24507058 or 12563265) (1997-2003)	24507058
Bearing, balance shaft front (part of 24502388)	SKF6205-2ZNRJEM
Block, engine assembly	24506028
Bolt, connecting rod	11589085
Bolt, counter balance gear	24501367
Bolt, counter balance shaft retainer	24500055
Bolt, front cover (2)	24504713
Bolt, front cover (1)	24504712
Bolt, harmonic balancer (24506341 or 24504736) (1997-2003)	24506341
Bolt, oil filter adapter	24504713
Bolt, lower intake (13)	24504090
Bolt, oil pan (24502791 or 24508626) (1997-2003)	24502791
Bolt, oil suction tube	24505570
Bolt, rocker cover w / washer (25534748 or 24502164) (1997-2003)	25534748
Bolt, screw camshaft sensor	25526395
Bolt, screw, oil gearotor, cover	25519242
Bolt, stud type, front cover & crankshaft sensor (short)	24504717
Bolt, stud type, front cover & crankshaft sensor (long)	24504718
Bolt, throttle body support	24503644
Bolt, upper intake long	24505205
Bolt, upper intake short	24506498
Bolt, Upper Intake, Stud	24502453
Bracket, breather tube	OHT3F-041-1
Breather tube, s.s. material	OHT3F-075-1
Bushing, balance shaft rear	24503193
Bushing, rocker cover	OHT3F-028-1
Connector, modified for length, GM pn 24502883	OHT3F-028-1 OHT3F-039-2
Cover, engine front	OHT3G-085-1
Cover, rear, crankshaft rear seal housing	OHT3G-085-1 OHT3G-088-1
Cover, oil gearotor	25521935
Cover, rocker arm valve cover left side plastic	25534751
Crankshaft	34502168
Dip stick, metric, extended length	
	OHT3G-064-1 OHT3F-043-1
Fitting, oil filter adapter	OHT3F-043-1 OHT3F-020-2
Flywheel, manual, modified p.n. 24503285	
Gasket, exhaust, end plate Gasket, exhaust flange, metal	OHT3F-009-1
	OHT3F-018-1
Gasket, Manifold, Upper Intake	17113137
Gasket, oil cooler, pkg. of 50	OHT3F-074-1
Gasket, oil filter, pkg. Of 50	OHT3F-062-1
Gear, balanceshaft drive	24504792
Gear, balanceshaft driven	24503524
Gear, counter balance drive	24504792
Gear, counter balance shaft	24503524
Grommet, rocker arm valve cover bolt	25534749
Harness, coil pack segment	3F022-2
Harness, fuel injector segment	3F022-1
Harness, wiring, dyno w/ OHT3F-056-1 SENSOR	OHT3F-022-1
Housing, assembly, bypass valve	OHT3F-084-1
Injector, fuel	17120601
Key, crankshaft	25534912 or 12563282
Magnet, camshaft position sensor	10456195
Manifold, cast iron	OHT3F-003-0

Manifold, exhaust, water cooled assy (one bank)OHT3F-0ASSEMBLY INCLIDES:	94-1 95-1 5A-1 96-1 99-1 18-1 28 52 1 REV N 8 26-1 25-1 93 94
I ea. runner, exhaust manifoldOHT3F-00I ea. Plate, rear, exhaust manifoldOHT3F-00I ea. elbow, exhaust, modifiedOHT3F-00I ea. plate, front, exhaust manifoldOHT3F-00I ea. gasket, exhaust, end plateOHT3F-00I ea. gasket, exhaust, flange, metalOHT3F-00I ea. gasket, exhaust, flange, metalOHT3F-00Manifold, lower intake245057Manifold, lower intake1709641Mocule, assembly, coil packOHT3F-00Mount front engine w/ bolt pattern for coil packOHT3F-00Mount, rear engine housing w/ air starter, muffler & shim packOHT3F-00Mount, rear engine housing w/ air starter, muffler & shim packOHT3F-00Mount, rear engine housing w/ air starter, muffler & shim packOHT3F-00Moutt, rear engine housing w/ air starter, muffler & shim packOHT3F-00Starter, air3F02254Starter, air3F02254Nut, throttle body fuel rail retainer2450644Nut, throttle body fuel rail retainer2450644Oulet, coolantOHT3F-00Oulet, coolantOHT3F-00Ponte, coolantOHT3F-00PON, specialOHT3F-00PCV, dummyOHT3F-00Plae, transmission locating2553633Fin, front cover upper245044Plae, rear, exhaust manifoldOHT3F-00Plae, erar, exhaust manifoldOHT3F-00Plae, transmission locating213380Plae, fort, exhaust manifoldOHT3F-00Plae, transmission locating123380Plae, tr	)5-1 5A-1 )9-1 18-1 28 52 1 REV N 8 26-1 25-1 )3 )4
1 ea. Plate, rear, exhaust manifoldOHT3F-001 ea. elbow, exhaust, modifiedOHT3F-002 ea. gasket, exhaust, end plateOHT3F-002 ea. gasket, exhaust, fange, metalOHT3F-001 ea. gasket, exhaust, fange, metalOHT3F-002 ea. gasket, exhaust, fange, metalOHT3F-004 maifold, lower intake245057.Manifold, lower intake245057.Manifold, lower intake0HT3F-00Module, assembly, coil packOHT3F-00Mount forot engine w' bolt pattern for coil packOHT3F-00Mount, rear engine housing w' air starter, muffler & shim packOHT3F-00Assembly includes:TStarter, air3F025-61Moutt, rear engine housing w' air starter, muffler & shim packOHT3F-00Austiffer, starter air3F025-55Shim pack, starter air3F025-56Nut, throttle body fuel rail retainer2450647Nut, throttle body fuel rail retainer2450647Nut, throttle body fuel rail retainer2450647Outlet, coolantOHT3F-00PCN, specialOHT3F-00PCN, specialOHT3F-00PCN, specialOHT3F-00Plate, front exhaust manifoldOHT3F-00Plate, ront exhaust manifoldOHT3F-00<	)5-1 5A-1 )9-1 18-1 28 52 1 REV N 8 26-1 25-1 )3 )4
1 ea. elbow, exhaust, modifiedOHT3F-001 ea. plate, front, exhaust manifoldOHT3F-002 ea. gasket, exhaust, end plateOHT3F-001 ea. gasket, exhaust, end plateOHT3F-001 ea. gasket, exhaust, fange, metalOHT3F-00Manifold, uyer intake245057.Manifold, uyer intake245057.Manifold, uyer intake110394Module, assembly, coil pack110394Mount, rear engine housing w/ air starter, muffler & shim packOHT3F-00Assembly includes:3F0254.Starter, air3F0254.Muffler, starter air3F0254.Nut, throttle body retainer2450644.Out (coolantOHT3F-00Out (coolant), no bypass, impregnatedOHT3F-00Out (coolant)OHT3F-00Par, IIIF Test, nickel platedOHT3F-00PCV, dummyOHT3F-00PCV, dummyOHT3F-00Plate, front, exhaust manifoldOHT3F-00Plate, fort (contant), no bypass, impregnatedOHT3F-00Plate, fort (contant), no bypass, impregnatedOHT3F-00Plate, root lover255363.Pin, front cover lover255363.Pin, front cover lover255363.Plate, fort, exhaust manifoldOHT3F-00Plate, rear, exhaust manifoldOHT3F-00Plate, rear, exhaust manifoldOHT3F-00Plate, fort, exhaust manifoldOHT3F-00Plate, fort, exhaust manifoldOHT3F-00Plate, fort, exhaust manifoldOHT3F-00Plate, rear, exhaust manifoldOHT3F-00 <t< td=""><td>5A-1 )6-1 )9-1 18-1 28 52 1 REV N 8 26-1 25-1 )3 )4</td></t<>	5A-1 )6-1 )9-1 18-1 28 52 1 REV N 8 26-1 25-1 )3 )4
1 ea. plate, front, exhaust manifoldOHT3F-02 ea. gasket, exhaust, end plateOHT3F-01 ea. gasket, exhaust, flange, metalOHT3F-0Manifold, lower intake245057;Manifold, upper intake170961;Module, assembly, coil pack110394Mount front engine w/ bolt pattern for coil packOHT3F-0Mount, rear engine housing w/ air starter, muffler & shim packOHT3F-0;Starter, airSf0254;Muffler, starter airSf0254;Muffler, starter airSf0254;Nut, throttle body retainer245064;Vut, throttle body retainer245064;Vut, throttle body retainer245064;Outlet, coolantOHT3F-0;Pan, IIIF Test, nickel platedOHT3F-0;PCM, specialOHT3F-0;PCM, specialOHT3F-0;PCM, dummyOHT3F-0;PCM, dummyOHT3F-0;PCM, dummyOHT3F-0;PCM, dummyOHT3F-0;PCM, dummyOHT3F-0;PLate, front, exhaust manifoldOHT3F-0;Plate, front, exhaust manifoldOHT3F-0;Plate, front, exhaust manifoldOHT3F-0;Plate, front, exhaust manifoldOHT3F-0;Plate, fort, exhaust manifoldOHT3F-0; <tr< td=""><td>96-1 99-1 18-1 28 52 1 REV N 8 26-1 25-1 93 94</td></tr<>	96-1 99-1 18-1 28 52 1 REV N 8 26-1 25-1 93 94
2 ea. gasket, exhaust, end plateOHT3F-01 ea. gasket, exhaust, flange, metalOHT3F-0Manifold, lower intake245057Manifold, lower intake245057Manifold, lower intake100961Module, assembly, coil packH10394Mount, rear engine w/ both pattern for coil packOHT3F-0Mount, rear engine housing w/ air starter, muffler & shim packOHT3F-0Starter, air3F025-0Muffler, starter air3F025-0Shim pack, starter air3F025-0Nut, throttle body fuel realiner2450647Nut, throttle body fuel realiner245064Oil filter housing assembly, no bypass, impregnatedOHT3F-0Outet, coolantOHT3F-0PCM, specialOHT3F-0PCM, specialOHT3F-0PCM, specialOHT3F-0Pin, cylinder head locating255363Pin, front cover upper255363Pin, front cover upper245014Plate, front, exhaust manifoldOHT3F-0Plate, erae, exhaust manifoldOHT3F-0Plate, front, exhaust manifoldOHT3F-0Plate, fuel yiek kole plusOHT3F-0Plug, auto hex, socket, (main oil gallery block off)OHT3F-0Plug, dip sickOHT3F-0Plug, dip sick and dip sick hole plugOHT3F-0Raif, fuel injectorA171206Raif, fuel injectorA171206Reamer, dip stick and big sick hole plugOHT3F-0Reamer, dip stick and tip sick hole plugOHT3F-0Reamer, dip stick and dip sick hole plugOHT3	99-1 18-1 28 52 1 REV N 8 26-1 25-1 93 94
l ea. gasket, exhaust, flange, metalOHT3F-0Manifold, lover intake245057.Manifold, uper intake170961.Meter, blowbyRX-116169-AModule, assembly, coil pack110394Mount, rear engine housing w/ air starter, muffler & shim packOHT3F-0.Assembly includes:3F025-0.Starter, air3F025-0.Starter, air3F025-0.Nut, throttle body fuel rail retainer2450640.Nut, throttle body retainer0HT3F-0.Outlet, coolantOHT3F-0.PCN, specialOHT3F-0.PCN, special0HT3F-0.Pin, righter haust manifoldOHT3F-0.Pin, front cover lower255363.Pin, transmission locating0HT3F-0.Plate, fear, exhaust manifoldOHT3F-0.Plate, ford, exhaust manifoldOHT3F-0.Plate, tigh stickOHT3F-0.Plate, tigh stickOHT3F-0.Plate, tigh stickOHT3F-0.Plate, tigh stick and dip stick hole plugOHT3F-0.Plate, tigh stick and dip stick hole plugOHT3F-0.Rail, fuel injector7112060. <tr< td=""><td>18-1 28 52 1 REV N 8 26-1 25-1 93 94</td></tr<>	18-1 28 52 1 REV N 8 26-1 25-1 93 94
l ea. gasket, exhaust, flange, metalOHT3F-0Manifold, lover intake245057.Manifold, uper intake170961.Meter, blowbyRX-116169-AModule, assembly, coil pack110394Mount, rear engine housing w/ air starter, muffler & shim packOHT3F-0.Assembly includes:3F025-0.Starter, air3F025-0.Starter, air3F025-0.Nut, throttle body fuel rail retainer2450640.Nut, throttle body retainer0HT3F-0.Outlet, coolantOHT3F-0.PCN, specialOHT3F-0.PCN, special0HT3F-0.Pin, righter haust manifoldOHT3F-0.Pin, front cover lower255363.Pin, transmission locating0HT3F-0.Plate, fear, exhaust manifoldOHT3F-0.Plate, ford, exhaust manifoldOHT3F-0.Plate, tigh stickOHT3F-0.Plate, tigh stickOHT3F-0.Plate, tigh stickOHT3F-0.Plate, tigh stick and dip stick hole plugOHT3F-0.Plate, tigh stick and dip stick hole plugOHT3F-0.Rail, fuel injector7112060. <tr< td=""><td>28 52 1 REV N 8 26-1 25-1 93 94</td></tr<>	28 52 1 REV N 8 26-1 25-1 93 94
Manifold, lower intake245057.Manifold, upper intake1709614Meter, blowbyRX-116169-AModule, assembly, coil pack1103344Mount front engine w/ bolt pattern for coil packOHT3F-0.Mount, rear engine housing w/ air starter, muffler & shim packOHT3F-0.Assembly includes:Starter, airStarter, air3F025-6.Shim pack, starter air3F025-6.Shim pack, starter air3F025-6.Nut, throttle body relariner2450644.Oil filter housing assembly, no bypass, impregnatedOHT3F-0.Outlet, coolantOHT3F-0.PCM, specialOHT3F-0.PCM, specialOHT3F-0.PCV, dummyOHT3F-0.PCV, dummyOHT3F-0.Pin, crylinder head locating255363.Pin, front cover upper245014.Plate, EGR blockoffOHT3F-0.Plate, Fort, exhaust manifoldOHT3F-0.Plate, starter, dual gallery block off)44477.Plug, dain, modifiedOHT3F-0.Plug, dain, modifiedOHT3F-0.Pl	52 1 REV N 8 26-1 25-1 13 04
Meter, blowRX-116169-AModule, assembly, coil pack110394Mount front engine w/ bolt pattern for coil packOHT3F-00Mount, rear engine housing w/ air starter, muffler & shim packOHT3F-00Assembly includes:3F025-0Starter, air3F025-0Shim pack, starter air3F025-0Shim pack, starter air3F025-0Nut, throttle body fuel rail retainer2450644Nut, throttle body fuel rail retainer2450644Oil filter housing assembly, no bypass, impregnatedOHT3F-00Outlet, coolantOHT3F-00Pan, IIIF Test, nickel platedOHT3F-00PCM, specialOHT3F-00PCM, specialOHT3F-00PCV, dummyOHT3F-00Pin, cylinder head locating2253633Pin, front cover lower2253633Pin, front cover lower2253633Plate, FORt, exhaust manifoldOHT3F-00Plate, er, exhaust manifoldOHT3F-00Plate, water pump housingOHT3F-00Plug, ding stickOHT3F-00Plug, ding, modifiedOHT3F-00Plug, ding, modifiedOHT3F-00Plug, ding, fuel injector2450543Rail, fuel injector2450543 <t< td=""><td>1 REV N 8 26-1 25-1 93 94</td></t<>	1 REV N 8 26-1 25-1 93 94
Module, assembly, coil pack110394Mount front engine w/ bolt pattern for coil packOHT3F-0.Mount, rear engine housing w/ air starter, muffler & shim packOHT3F-0.Assembly includes:3F025-0.Starter, air3F025-0.Muffler, starter air3F025-0.Nut, throttle body fuel rail retainer2450644Nut, throttle body fuel rail retainer2450644Nut, throttle body fuel rail retainer0HT3F-0.Outlet, coolantOHT3F-0.Pan, IIIF Test, nickel platedOHT3F-0.PCV, dummyOHT3F-0.PCV, dummyOHT3F-0.Pin, front cover upper2450644Nin, front cover upper2450644Pin, transmission locating2553633Pin, front cover upper2450644OHT3F-0.0HT3F-0.Plate, erg, exhaust manifoldOHT3F-0.Plate, ret, exhaust manifoldOHT3F-0.Plate, ret, exhaust manifoldOHT3F-0.Plug, drain, modifiedOHT3F-0.Plug, drain, modified <td< td=""><td>8 26-1 25-1 )3 )4</td></td<>	8 26-1 25-1 )3 )4
Mount front engine w/ bolt pattern for coil packOHT3F-00Mount, rear engine housing w/ air starter, muffler & shim packOHT3F-00Assembly includes:3F025-0Starter, air3F025-0Muffler, starter air3F025-0Shim pack, starter air3F025-0Nut, throttle body fuel rail retainer2450644Nut, throttle body fuel rail retainer2450644Oil filter housing assembly, no bypass, impregnatedOHT3F-00Outlet, coolantOHT3F-00PCM, specialOHT3F-00PCV, dummyOHT3F-00PCV, dummyOHT3F-00PCV, dummy2553633Pin, front cover lower2553633Pin, front cover lower2553633Pin, front cover lower2553633Pin, front cover upper2450114Pint, exhaust manifoldOHT3F-00Plate, mout, socket, (main oil gallery block off)0HT3F-00Plate, mouting0HT3F-00Plate, stock, socket, (main oil gallery block off)0HT3F-00Plug, drain, modified0HT3F-00Plug, drain, modified0HT3F-00Plug, drain, modified0HT3F-00Plug, drain, modified0HT3F-00Rail, fuel injector2450544Rail, fuel injector2450544Rail, fuel injector245054Rail, fuel injector0HT3F-00Requerter set245054Rail, fuel injector0HT3F-00Requerter set, in an infold0HT3F-00Plug, drain, modified0HT3F-00Plug, drain, modified	26-1 25-1 )3 )4
Mount, rear engine housing w/ air starter, muffler & shim packOHT3F-0Assembly includes:3F025-0Starter, air3F025-0Muffler, starter air3F025-0Shim pack, starter air3F025-0Nut, throttle body fuel rail retainer2450640Nut, throttle body fuel rail retainer2450640Oil filter housing assembly, no bypass, impregnatedOHT3F-00Outlet, coolantOHT3F-00PCM, specialOHT3F-00PCV, dummyOHT3F-00PCV, dummyOHT3F-00Pin, reylinder head locating255363Pin, front cover lower255363Pin, front cover upper2450110Pin, transmission locating123800Plate, EGR blockoffOHT3F-00Plate, rear, exhaust manifoldOHT3F-00Plug, auto hex, socket, (main oil gallery block off)44477Plug, dip stickOHT3F-00Plug, dip stickOHT3F-00Plug, dip stickOHT3F-00Plug, dip stickOHT3F-00Plug, dip stickOHT3F-00Plug, dip stick / topic plug2450543Rail, fuel injector2450543Rail, fuel injector7112060Reamer, dip stick hole plugOHT3F-00Reamer, dip stick and dip stick hole plugOHT3F-00Regulator, fuel pressure, on rail171133-00	25-1 )3 )4
Assembly includes:3F025-0Starter, air3F025-0Shim pack, starter air3F025-0Shim pack, starter air3F025-0Shut, throttle body fuel rail retainer2450644Nut, throttle body fuel rail retainer2450644Oil filter housing assembly, no bypass, impregnatedOHT3F-0Outlet, coolantOHT3F-0Pan, IIIF Test, nickel platedOHT3F-0PCV, specialOHT3F-0PCV, dummyOHT3F-0PCV, dummyOHT3F-0Pin, cylinder head locating255363Pin, front cover lower255363Pin, front cover upper2450110Pin, transmission locating1233800Plate, EGR blockoffOHT3F-0Plate, kaust manifoldOHT3F-0Plate, water pump housingOHT3F-0Plug, drain, modifiedOHT3F-0Plug, drain, modifiedOHT3F-0Plug, drain, modifiedOHT3F-0Plug, drain, modifiedOHT3F-0Punp, oil, gearoter set2450543Rail, fuel injector171206Reamer, dip stick and dip stick hole plugOHT3F-0Reamer, dip stick and dip stick hole plugOHT3F-0Regulator, fuel pressure, on rail171133-0	)3 )4
Starter, air3F025-0Muffler, starter air3F025-0Shin pack, starter air3F025-0Nut, throttle body fuel rail retainer2450644Nut, throttle body retainer2450644Oil filter housing assembly, no bypass, impregnatedOHT3G-0Outlet, coolantOHT3F-00Pan, IIIF Test, nickel platedOHT3F-00PCV, dummyOHT3F-00PCV, dummyOHT3F-00Pin, cylinder head locating2553633Pin, front cover lower2553633Pin, front cover upper2450110Plate, EGR blockoffOHT3F-00Plate, front, exhaust manifoldOHT3F-00Plate, starter aminfoldOHT3F-00Plate, starter aminfoldOHT3F-00Plate, starter aminfoldOHT3F-00Plate, starter aminfoldOHT3F-00Plate, front, exhaust manifoldOHT3F-00Plate, starter aminfoldOHT3F-00Plate, inder aminfoldOHT3F-00Plate, inder aminfoldOHT3F-00Plate, front, exhaust manifoldOHT3F-00Plate, fund, exhaust manifoldOHT3F-00Plate, inder aminfoldOHT3F-00Plate, inder amin aminfoldOHT3F-00Plate, inder aminfold	)4
Starter, air3F025-0Muffler, starter air3F025-0Shin pack, starter air3F025-0Nut, throttle body fuel rail retainer2450644Nut, throttle body retainer2450644Oil filter housing assembly, no bypass, impregnatedOHT3G-0Outlet, coolantOHT3F-00Pan, IIIF Test, nickel platedOHT3F-00PCV, dummyOHT3F-00PCV, dummyOHT3F-00Pin, cylinder head locating2553633Pin, front cover lower2553633Pin, front cover upper2450110Plate, EGR blockoffOHT3F-00Plate, front, exhaust manifoldOHT3F-00Plate, starter aminfoldOHT3F-00Plate, starter aminfoldOHT3F-00Plate, starter aminfoldOHT3F-00Plate, starter aminfoldOHT3F-00Plate, front, exhaust manifoldOHT3F-00Plate, starter aminfoldOHT3F-00Plate, inder aminfoldOHT3F-00Plate, inder aminfoldOHT3F-00Plate, front, exhaust manifoldOHT3F-00Plate, fund, exhaust manifoldOHT3F-00Plate, inder aminfoldOHT3F-00Plate, inder amin aminfoldOHT3F-00Plate, inder aminfold	)4
Shim pack, starter air3F025-0Nut, throttle body fuel rail retainer2450644Nut, throttle body retainer2450644Oil filter housing assembly, no bypass, impregnatedOHT3G-0Outlet, coolantOHT3G-0Outlet, coolantOHT3G-0PCM, specialOHT3F-0PCV, dummyOHT3F-0PCV, dummyOHT3F-0Pin, right retainer2553632Pin, front cover lower2553632Pin, front cover upper2450114Pin, transmission locating1233800Plate, EGR blockoffOHT3F-00Plate, retain endifiedOHT3F-00Plate, water pump housingOHT3F-00Plug, dip stickOHT3F-00Plug, dip stickOHT3F-00Plug, dip stickOHT3F-00Plug, dip stickOHT3F-00Plug, dip stick and dip stick hole plugOHT3F-00Plug, dip stick and dip stick hole plugOHT3F-00Plug, dip stick and dip stick hole plugOHT3F-00Plug, dip stick not dip stick hole plugOHT3F-00Plate, retain, modified17112060Reamer, dip stick hole plugOHT3F-00Regulator, fuel pressure, on rail1711334	
Nut, throttle body fuel rail retainer2450640Nut, throttle body retainer2450640Oil filter housing assembly, no bypass, impregnatedOHT3G-0Outlet, coolantOHT3F-00Pan, IIIF Test, nickel platedOHT3F-00PCW, specialOHT3F-00PCV, dummyOHT3F-00Pin, cylinder head locating2553632Pin, front cover lower2553632Pin, front cover upper2450114Pin, transmission locating1233800Plate, EGR blockoffOHT3F-00Plate, rear, exhaust manifoldOHT3F-00Plate, water pump housingOHT3F-00Plug, auto hex, socket, (main oil gallery block off)444777Plug, dip stickOHT3F-00Plug, dira, modifiedOHT3F-00Plug, frant, exhaust manifoldOHT3F-00Plug, blick off0HT3F-00Plug, dira in, modified0HT3F-00Plug, dira in, modified0HT3F-00Plug, dira in, modified0HT3F-00Plug, dira in, modified0HT3F-00Plug, blick off1710962Plug, dira in, modified1710962Plug, dira in, modified0HT3F-00Plug, blick and dip stick hole plug0HT3F-00Plate, fuel injector171134Rail, fuel171134Request, fuel pressure, on rail171134	5
Nut, throttle body retainer2450644Oil filter housing assembly, no bypass, impregnatedOHT3G-0Outlet, coolantOHT3F-0Pan, IIIF Test, nickel platedOHT3F-0PCM, specialOHT3F-0PCV, dummyOHT3F-0PCV, dummyOHT3F-0Pin, cylinder head locating2553632Pin, front cover lower2553632Pin, front cover upper2450111Pin, transmission locating1233807Plate, EGR blockoffOHT3F-00Plate, front, exhaust manifoldOHT3F-00Plate, water pump housingOHT3F-00Plate, socket, (main oil gallery block off)444777Plug, dip stickOHT3F-00Plug, dira, modifiedOHT3F-00Plug, dira, modifiedOHT3F-00Plug, blick and big stick hole plug2450542Rail, fuel injector1711036Reamer, dip stick and dip stick hole plugOHT3F-00Regulator, fuel pressure, on rail1711334	
Nut, throttle body retainer2450644Oil filter housing assembly, no bypass, impregnatedOHT3G-0Outlet, coolantOHT3F-0Pan, IIIF Test, nickel platedOHT3F-0PCM, specialOHT3F-0PCV, dummyOHT3F-0PCV, dummyOHT3F-0Pin, cylinder head locating2553632Pin, front cover lower2553632Pin, front cover upper2450114Pin, transmission locating1233807Plate, EGR blockoffOHT3F-00Plate, stokeffOHT3F-00Plate, stokeffOHT3F-00Plate, stokeffOHT3F-00Plate, stokeffOHT3F-00Plate, stokeffOHT3F-00Plate, stokeffOHT3F-00Plate, stokeffOHT3F-00Plate, stokeffOHT3F-00Plate, stokeffOHT3F-00Plate, if ont, exhaust manifoldOHT3F-00Plate, stokeffOHT3F-00Plate, uater pump housingOHT3F-00Plug, dip stickOHT3F-00Plug, dip stickOHT3F-00Plug, dip stickOHT3F-00Plug, dip stickOHT3F-00Plug, diain, modifiedOHT3F-00Pump, oil, gearoter set2450542Rail, fuelinjectorRail, fuel injector1712060Reamer, dip stick hole plugOHT3F-00Regulator, fuel pressure, on rail1711342	i9
Oil filter housing assembly, no bypass, impregnatedOHT3G-0Outlet, coolantOHT3F-0Pan, IIIF Test, nickel platedOHT3F-0PCM, specialOHT3F-0PCV, dummyOHT3F-0PCV, dummyOHT3F-0Pin, cylinder head locating255363Pin, front cover lower255363Pin, front cover upper2450114Pin, transmission locating123380Plate, EGR blockoffOHT3F-0Plate, front, exhaust manifoldOHT3F-0Plate, main foldOHT3F-0Plate, water pump housingOHT3F-0Plug, dip stickOHT3F-0Plug, dip stickOHT3F-0Plug, finst, fuel170982Rail, fuel170982Rail, fuel171133Regulator, fuel pressure, on rail171133	i9
Outlet, coolantOHT3F-0.Pan, IIIF Test, nickel platedOHT3F-0.PCM, specialOHT3F-0.PCV, dummyOHT3F-0.Pin, cylinder head locating255363.Pin, ront cover lower255363.Pin, front cover upper245011.Pin, transmission locating123380.Plate, EGR blockoffOHT3F-0.Plate, front, exhaust manifoldOHT3F-0.Plate, rear, exhaust manifoldOHT3F-0.Plate, rear, exhaust manifoldOHT3F-0.Plate, socket, (main oil gallery block off)44477.Plug, dip stickOHT3F-0.Plug, dip stickOHT3F-0.Plug, dip stickOHT3F-0.Plug, front, exhaust manifoldOHT3F-0.Plate, rear, exhaust manifoldOHT3F-0.Plug, dip stickOHT3F-0.Plug, dip stickOHT3F-0.Plug, dip stickOHT3F-0.Plug, dip stickOHT3F-0.Plug, dip stick and dip stick hole plugOHT3F-0.Reamer, dip stick and dip stick hole plugOHT3F-0.Regulator, fuel pressure, on rail171133.	
PCM, specialOHT3F-02PCV, dummyOHT3F-02Pin, cylinder head locating2553632Pin, cylinder head locating2553632Pin, front cover lower2553632Pin, front cover upper2450110Pin, transmission locating1233807Plate, EGR blockoffOHT3F-02Plate, front, exhaust manifoldOHT3F-02Plate, rear, exhaust manifoldOHT3F-02Plate, rear, exhaust manifoldOHT3F-02Plate, water pump housingOHT3F-02Plug, auto hex, socket, (main oil gallery block off)444777Plug, dip stickOHT3F-02Plug, drain, modifiedOHT3F-02Pump, oil, gearoter set2450542Rail, fuel1709822Rail, fuel injector1711206Reamer, dip stick hole plugOHT3F-02Regulator, fuel pressure, on rail1711334	34-1
PCM, specialOHT3F-02PCV, dummyOHT3F-02Pin, cylinder head locating2553632Pin, font cover lower2553632Pin, front cover upper2450110Pin, transmission locating1233807Plate, EGR blockoffOHT3F-02Plate, front, exhaust manifoldOHT3F-02Plate, rear, exhaust manifoldOHT3F-02Plate, rear, exhaust manifoldOHT3F-02Plate, water pump housingOHT3F-02Plug, auto hex, socket, (main oil gallery block off)444777Plug, dip stickOHT3F-02Plug, drain, modifiedOHT3F-02Pump, oil, gearoter set2450542Rail, fuel1709822Rail, fuel injector1711206Reamer, dip stick hole plugOHT3F-02Regulator, fuel pressure, on rail1711334	/3-1
PCV, dummyOHT3F-00Pin, cylinder head locating2553633Pin, front cover lower2553633Pin, front cover upper2450110Pin, transmission locating1233807Plate, EGR blockoffOHT3F-00Plate, front, exhaust manifoldOHT3F-00Plate, rear, exhaust manifoldOHT3F-00Plate, water pump housingOHT3F-00Plate, water pump housingOHT3F-00Plug, auto hex, socket, (main oil gallery block off)4444777Plug, dip stickOHT3F-00Plug, drain, modifiedOHT3F-00Pump, oil, gearoter set2450543Rail, fuel170982Rail, fuel injector1711206Reamer, dip stick hole plugOHT3F-00Regulator, fuel pressure, on rail1711334	21-1
Pin, cylinder head locating2553633Pin, front cover lower2553633Pin, front cover upper2450116Pin, transmission locating1233807Plate, EGR blockoffOHT3F-00Plate, front, exhaust manifoldOHT3F-00Plate, rear, exhaust manifoldOHT3F-00Plate, water pump housingOHT3F-00Plug, auto hex, socket, (main oil gallery block off)4444777Plug, dip stickOHT3F-00Plug, drain, modifiedOHT3F-00Pump, oil, gearoter set2450543Rail, fuel170982Rail, fuel injector1712060Reamer, dip stick and dip stick hole plugOHT3F-00OHT3F-00OHT3F-00Regulator, fuel pressure, on rail1711334	)2-1
Pin, front cover upper2450110Pin, transmission locating1233807Plate, EGR blockoffOHT3F-02Plate, Fornt, exhaust manifoldOHT3F-02Plate, rear, exhaust manifoldOHT3F-02Plate, vater pump housingOHT3F-02Plug, auto hex, socket, (main oil gallery block off)444777Plug, dip stickOHT3F-02Plug, drain, modifiedOHT3F-02Pump, oil, gearoter set2450542Rail, fuel1709822Rail, fuel injector17112060Regulator, fuel pressure, on rail1711334	20
Pin, transmission locating1233807Plate, EGR blockoffOHT3F-02Plate, front, exhaust manifoldOHT3F-00Plate, rear, exhaust manifoldOHT3F-00Plate, rear, exhaust manifoldOHT3F-00Plate, water pump housingOHT3F-01Plug, auto hex, socket, (main oil gallery block off)444777Plug, dip stickOHT3F-00Plug, drain, modifiedOHT3F-00Pump, oil, gearoter set2450542Rail, fuel1709822Rail, fuel injector17112060Reamer, dip stick hole plugOHT3F-00Regulator, fuel pressure, on rail1711334	23
Pin, transmission locating1233807Plate, EGR blockoffOHT3F-02Plate, front, exhaust manifoldOHT3F-00Plate, rear, exhaust manifoldOHT3F-00Plate, rear, exhaust manifoldOHT3F-00Plate, water pump housingOHT3F-01Plug, auto hex, socket, (main oil gallery block off)444777Plug, dip stickOHT3F-00Plug, drain, modifiedOHT3F-00Pump, oil, gearoter set2450542Rail, fuel1709822Rail, fuel injector17112060Reamer, dip stick hole plugOHT3F-00OHT3F-0017112360Regulator, fuel pressure, on rail17113360	52
Plate, front, exhaust manifoldOHT3F-00Plate, rear, exhaust manifoldOHT3F-00Plate, water pump housingOHT3F-00Plug, auto hex, socket, (main oil gallery block off)44477Plug, dip stickOHT3F-00Plug, drain, modifiedOHT3F-00Pump, oil, gearoter set2450542Rail, fuel170982Rail, fuel injector17112060Reamer, dip stick and dip stick hole plugOHT3F-00Regulator, fuel pressure, on rail1711334	6
Plate, rear, exhaust manifoldOHT3F-00Plate, water pump housingOHT3F-01Plug, auto hex, socket, (main oil gallery block off)44477Plug, dip stickOHT3F-01Plug, drain, modifiedOHT3F-02Pump, oil, gearoter set2450543Rail, fuel170982Rail, fuel injector1712060Reamer, dip stick and dip stick hole plugOHT3F-02Regulator, fuel pressure, on rail1711334	24-1
Plate, water pump housingOHT3F-0Plug, auto hex, socket, (main oil gallery block off)44477Plug, dip stickOHT3F-0Plug, drain, modifiedOHT3F-0Pump, oil, gearoter set2450543Rail, fuel170982Rail, fuel injector1712060Reamer, dip stick and dip stick hole plugOHT3F-00Regulator, fuel pressure, on rail1711334	)6-1
Plug, auto hex, socket, (main oil gallery block off)44477Plug, dip stickOHT3F-00Plug, drain, modifiedOHT3F-00Pump, oil, gearoter set2450543Rail, fuel1709822Rail, fuel injector1712060Reamer, dip stick and dip stick hole plugOHT3F-00Regulator, fuel pressure, on rail1711334	)5-1
Plug, auto hex, socket, (main oil gallery block off)44477Plug, dip stickOHT3F-00Plug, drain, modifiedOHT3F-00Pump, oil, gearoter set2450543Rail, fuel1709822Rail, fuel injector1712060Reamer, dip stick and dip stick hole plugOHT3F-00Regulator, fuel pressure, on rail1711334	31-1
Plug, dip stickOHT3F-00Plug, drain, modifiedOHT3F-00Pump, oil, gearoter set2450543Rail, fuel1709823Rail, fuel injector1712060Reamer, dip stick and dip stick hole plugOHT3F-00Regulator, fuel pressure, on rail1711334	1
Pump, oil, gearoter set2450543Rail, fuel1709823Rail, fuel injector1712060Reamer, dip stick and dip stick hole plugOHT3F-07Regulator, fuel pressure, on rail1711334	5-1
Rail, fuel170982Rail, fuel injector171206Reamer, dip stick and dip stick hole plugOHT3F-0'Regulator, fuel pressure, on rail1711334	i <b>3</b> -1
Rail, fuel injector1712060Reamer, dip stick and dip stick hole plugOHT3F-07Regulator, fuel pressure, on rail1711334	3
Reamer, dip stick and dip stick hole plugOHT3F-0'Regulator, fuel pressure, on rail1711334	1
Regulator, fuel pressure, on rail 1711334	)1
	/1-1
	-6
Retainer, Counter Balance, Timing Chain Oiler 245003'	'4
Retainer, Rocker arm (replace after 6 tests) 245022	'8
Runner, exhaust manifold OHT3F-00	)4-1
Screen, oil pump (w/suction pipe) 2450550	i9
Seal, oil pan drain plug (o ring) 353696	6
Sensor, camshaft position 1045614	-8
Sensor, crankshaft position 1045614	+1
Sensor, Mass Air Flow (2003 shielded) 12568877 or 8	3961007
Sensor, modified coolant temperature OHT3F-0:	6-1
Shaft assembly, counter balance 24502388 or 2	4506557
Shield, crankshaft position sensor 2450644	
Shim pack, starter air 3F025-0	
Shim, steel, .005" thick, 10 per pkg. OHT3F-07.	40
Shim, steel, .010" thick, 10 per pkg. OHT3F-07.	40 95
Shim, steel, .015" thick, 10 per pkg. OHT3F-07.	40 95 2-005
Shim, steel, .020" thick, 10 per pkg. OHT3F-07/	40 95 2-005 2-010
Shim, steel, .031" thick, 10 per pkg. OHT3F-07/	40 95 2-005 2-010 2-015
Sleeve, valve stem protectors (pkg. of 100) OHT3F-0	40 95 2-005 2-010 2-015 2-020
Sprocket, crankshaft, special 2 pc. OHT3F-0.	40 95 2-005 2-010 2-015 2-020 2-031

PART DESCRIPTION	PART NUMBER
Starter, air	3F025-03
Stud, front cover (2)	24504717
Stud, front cover (2)	24504718
Support, Throttle body	24504697
Throttle body (2 bolt mass air flow sensor)	24507235
Throttle body (3 bolt mass air flow sensor)	24504302
Tool, camshaft bushing installation	OHT3F-019-2
Tool, oil pump primer	OHT3F-038-1
Tube, throttle body to fuel pressure regulator	24505671

## A4. Sequence III Test Fuel Analysis (Haltermann HF003 Test Fuel)

			HALTERMANN HF003 Specs		
TEST	METHOD	UNITS	MIN	TARGET	MAX
Distillation - IBP	ASTM D86	°F	75		95
5%		°F			
10%		°F	120		135
20%		°F			
30%		°F			
40%		°F			
50%		°F	200		230
60%		°F			
70%		°F			
80%		°F			
90%		°F	305		325
95%		°F			
Distillation - EP		°F			415
Recovery		vol %		Report	
Residue		vol %		Report	
Loss		vol %		Report	
API Gravity (@60°F/60°F)	ASTM D4052	°API	58.7		61.2
Density (@15 °C)	ASTM D4052	kg/L	0.734		0.744
Reid Vapor Pressure	ASTM D4032 ASTM D323	psi	8.7		9.2
Reid Vapor Pressure	ASTM D525 ASTM D5191	psi	-	Report	
Carbon	ASTM D3191	wt fraction		Report	
Carbon	ASTM E191	wt fraction		Report	
Hydrogen	ASTM E191	wt fraction		Report	
Hydrogen/Carbon ratio	ASTM E191	mole/mole		Report	
Oxygen	ASTM D4815	wt %			0.05
Sulfur ppm	ASTM D4813	mg/kg	3		15
Lead	ASTM D3433	g/gal	-		0.01
Phosphorous	ASTM D3237	g/gal			0.005
Composition, aromatics	ASTM D3231	vol %	26.0		32.5
Composition, olefins	ASTM D1319	vol %			10.0
Composition, saturates		vol %		Report	
Particulate matter	ASTM D1319 ASTM D5452	mg/L			1
Oxidation Stability	ASTM D5452 ASTM D525	minutes	240		-
Copper Corrosion	ASTM D525 ASTM D130				1
Gum content, washed		mg/100mL			5
Fuel Economy	ASTM D381	<u>.</u>	2401		2441
Numerator/C Density	ASTM E191		2701	Decert	2771
C Factor	ASTM E191		06.0	Report	
Research Octane Number	ASTM D2699		96.0	Decert	
Motor Octane Number	ASTM D2700		7 5	Report	
Sensitivity		Btu/lb	7.5	Poport	
Net Heating Value, btu/lb	ASTM D3338	Btu/lb		Report	
Net Heating Value, btu/lb	ASTM D240	Btu/lb		Report	
Color	VISUAL	1.75 ptb		Red	

Summary of Part Number Changes		
Table A2.1		
Bolt / screw, thrust plate retainer (moved from Table A2.2) Bolt, cylinder head, long (added both old and new part number) Gasket kit, intake manifold lower (added both old and new part number) Gasket, oil pan (added both old and new part number) Plug, cylinder head cup (corrected part number) Plug, engine block, oil gallery (corrected part number) Plug, ignition spark (corrected part number) Rod, connecting (cast) (deleted)	25519242 25527831 or 8889177 89017399 or 8901781 24501259 or 1258157 24502262 3835577 NGK TR6 24501696	
Table A2.2		
Balancer, harmonic (24507058 or 12563265) (1997-2003) Listed alternate part number	24507058	
Bolt, connecting rod Corrected part number	11589088	
Bolt, harmonic balancer (2406341 or 24504736) (1997-2003)	24506341	
Listed alternate part number Bolt, oil pan (2402791 or 24502164) (1997-2003)	24502791	
Listed alternate part number Bolt, Rocker cover w/ washer (25534748 or 24502164) (1997-2003	25534748	
Listed alternate part number Bolt, stud type, front cover and crankshaft sensor (long)	24504718	
Added part description and number, omitted from previous table Key, crankshaft (25534912 or 12563282) (1997-203) Listed alternate part number	25534912	
Rail, fuel	17098211	
Corrected part number Retainer, counter balance, timing chain oiler Corrected part number	24500374	
Retainer, rocker arm (replace after 6 tests) Added to part list	24502278	
Shaft assembly, counter balance Listed alternate part number	24502388 or 24506557	
Stud, front cover (2)	24504717	
Stud, front cover (2)	24504718	
Support, throttle body	24504697	
Tube, throttle body to fuel pressure regulator	24505671	
Parts added to Table, not in previous version		