
CAT-C13 Liner Cleaning Method



Liner Cleaning Methods

- As is: New, no cleaning, placed into oven
- Tide & Hot Water: Scrubbed with Tide and hot water, placed into oven
- Ultra-Sonic Bath: Placed in bath for 3-hrs. Light scrub with Tide and water, placed into oven
- LAC-147: Scrubbed with LAC-147, rinsed with hot water, placed into oven
- **LAC-147**: Soaked for 3 hours, light scrubb with Tide and hot water, placed into oven.
- **New**: No cleaning, no oven

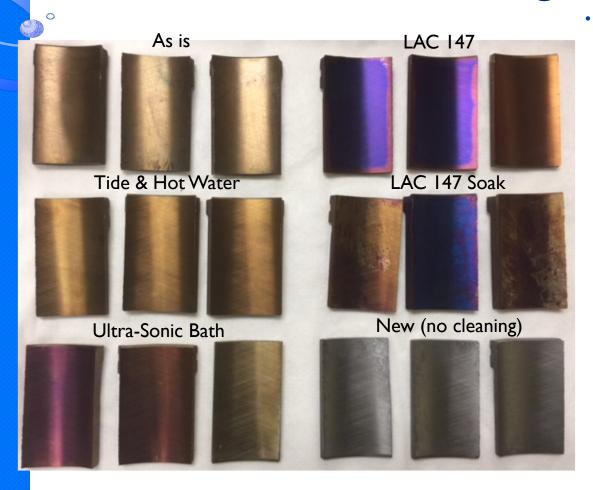