

Address 100 Barr Harbor Drive PO Box C700 W. Conshohocken, PA 19428-2959 / USA *Phone* 610.832.9500 *Fax* 610.832.9666 *Web* www.astm.org

COMMITTEE D02 ON PETROLEUM PRODUCTS, LIQUID FUELS, AND LUBRICANTS

CHAIRMAN: RANDY F JENNINGS, TENNESSEE DEPT OF AGRIC, P O BOX 40627, NASHVILLE, TN 37204, UNITED STATES (615) 837-5327, FAX: (615) 837-5335, E-MAIL: RANDY JENNINGS@TN.GOV
FIRST VICE CHAIRMAN: JAMES J SIMNICK, BP AMERICA, 150 W WARRENVILLE RD, NAPERVILLE, IL 60563, UNITED STATES (630) 420-5936, FAX: (630) 420-4831, E-MAIL: SIMNICJJ@BP.COM
SECOND VICE CHAIRMAN: MICHAEL A COLLIER, PETROLEUM ANALYZER CO LP, 21114 Hwy 113, CUSTER PARK, IL 60481, UNITED STATES (815) 458-0216, FAX: (815) 458-0217, E-MAIL: MICHAEL.COLLIER@PACLP.COM
SECOND SECRETARY: HIND M ABI-AKAR, CATERPILLAR INC, BLDG H3000, OLD GALENA ROAD, MOSSVILLE, IL 61552, UNITED STATES (309) 578-9553, E-MAIL: ABI-AKAR_HIND@CAT.COM
SECRETARY: SCOTT FENWICK, NATIONAL BIODIESEL BOARD, PO BOX 104848, JEFFERSON CITY, MO 65110-4898, UNITED STATES (800) 841-5849, FAX: (537) 635-7913, E-MAIL: SFENWICK@BIODIESEL.ORG
STAFF MANAGER: ALYSON FICK, (610) 832-9681, FAX: (610) 832-9668, E-MAIL: AFICK@ASTM.ORG

Issued: Jan. 13, 2017 Reply to: Dan Worcester Southwest Research Institute 6220 Culebra Rd. San Antonio, TX 78238 Phone: 210.522.2405 Email: <u>dworcester@swri.org</u>

These are the unapproved minutes of the 01.10.2017 Sequence VI Conference Call.

This document is not an ASTM standard; it is under consideration within an ASTM technical committee but has not received all approvals required to become an ASTM standard. It shall not be reproduced or circulated or quoted, in whole or in part, outside of ASTM committee activities except with the approval of the chairman of the committee having jurisdiction and the president of the society. Copyright ASTM, 100 Barr Harbor Drive, West Conshohocken, PA 19428-2959.

The meeting was called to order at 10:00 AM Eastern Time by Greg Miranda.

Agenda

The Agenda is the included as Attachment 1.

1.0 Roll Call

The Attendance list is Attachment 2. Katerina Pecinovsky replaces Dave Glaenzer as voting member for Afton.

2. Approval of Meeting minutes from November 07, 2016 Seq. VI SP meeting

Motion #1: Approve the Surveillance Panel minutes.

- 2.1 Greg made the motion and Adrian seconded.
- 2.2 The vote received unanimous approval.

3. Old Business and Update Item Review

3.1 VID Extension taskforce update

Adrian noted that the VID continues. Lubrizol removed their VID. SwRI has one calibrated engine running.

3.2 VIE hardware taskforce update

There was discussion on the methods to introduce the GM kit engines. There will be a lab survey to see the number of stands available for support for this effort. There will also be a survey on the remaining OHT-2 engines. Adrian will send the survey for the stands. There are 79 OHT-2 engines remaining. OHT will send a survey for engines needed. Scott is working on the final parts list for another kit order. There will need to be a letter with pricing. Adrian will have a conference call Thursday 01.19.2017 to discuss these issues.

4. New Business

4.1 Proposal for revision of VIE stand/engine calibration requirements – Adrian Alfonso The existing procedure requires a mini-calibration every 4-5 weeks with a new engine replacement. Dave Glaenzer recommended a calibration every 90 days as there are usually minimal or no adjustments on these calibrations

Motion [Adrian] This motion was tabled for a later meeting. Labs are to go back and review current calibration data for RPM, Torque, Fuel Flow, Exhaust Back Pressure and Air Fuel Ratio. Related to this, the VIE procedure is out for ballot so any changes will require an information letter.

4.2 VIF Precision Matrix analysis review

Jo Martinez gave the Stats Group Presentation. See Attachment 3.

The analysis is based on 18 valid tests. Changes in baseline weighting could improve response, 8% for FEI 1 and 11% for FEI 2. There appears to be a change in engine hour response, there is a shift in separation of the reference oils, and the second test on engines has the mildest response. FEI 1 is best if compared to BLB 2 only, not BLB2 and BLA as is done on the VIE. FEI 2 also shows better response when compared only to BLA. Slide 4 shows the tests used for analysis. There needs to be more data, especially RO 1011 data as the second run on an engine. New engines would be preferred and the Stat Group could develop a test matrix. Dave noted that all of the matrix was on OHT-1 engines and all labs are now running the OHT-2 version. There is not a shift in response in the VIE at this point. Todd indicated labs might be able to get more runs per engine. Andy gave is response for the questions on Slide 16 as "no, no, no, yes, no, yes and Option 3". Greg felt more discussion is needed and a there is a Face to Face meeting planned in February. Jim recommended the meeting take place before the AOAP meeting so recommendations could be made.

5.0 Next Meeting.

5.1 Proposal: Face-to-Face meeting week of February AOAP meeting in San Antonio, TX5.2 Objective: Finalize VIF discussion.

There will be another conference call 01.17.2017 at 10:00 AM Eastern Time to continue discussion.

Rich noted that there is a typo in the procedure that will be corrected with an information letter. Labs will need to prepare to offer stands for approval of the new BL-5 baseline oil. There is a quantity of BL-4 still available at TMC.

The meetings adjourned at 11:50 AM.

Sequence VI Surveillance Panel Conference Call Agenda January 10, 2017 @ 10:00-12:00 EST

Audio Connection

Call-in Number: +1-415-655-0001 Conference Code: 190 653 723

Webex Meeting URL:

https://meetings.webex.com/collabs/#/meetings/detail?uuid=M034A11Q4KYXQ6 LAPFHIXEA79X-20XT&rnd=309323.72794

1. Roll Call (start 10:05 EST)

- 1.1. SP Membership changes and additions
- 2. Approval of Meeting minutes from November 7, 2016 Seq. VI SP meeting

3. Old Business and Update Item Review

- 3.1. VID Extension taskforce update
- 3.2. VIE hardware taskforce update

4. New Business

4.1. Proposal for revision of VIE stand/engine calibration requirements -Adrian Alfonso

4.2. VIF Precision Matrix analysis review

5. Next Meeting

5.1. Proposal: Face-to-Face meeting week of February AOAP meeting in San Antonio, TX. 5.1.1. Objective: Finalize VIF discussion.

6. Meeting Adjourned

Name	Email/Phone C	Company	Attend	
Adrian Alfonso	Phone: (210) 838-0431	Intertek	ATTEND	
Voting Member	Adrian.Alfonso@intertek.com	IIIUIUK		
Jason Bowden	Phone: (440) 354-7007	OHT	ATTEND	
Voting Member	jhbowden@ohtech.com			
Amol Savant	acsavant@valvoline.com.com	Valvoline	ATTEND	
Voting Member	acsavance varvonne.com.com	v ar v orme		
Tim Cushing	Phone: (248) 881-3518	General	ATTEND	
Voting Member	<u>Timothy.Cushing@gm.com</u>	Motors		
Rich Grundza	Phone: (412) 365-1034	ТМС	ATTEND	
Voting Member	reg@astmtmc.cmu.edu			
Jeff Hsu	Phone: (832) 419-3482	Shell		
Voting Member	j.hsu@shell.com			
Teri Kowalski	Phone: (734) 995-4032	Toyota	ATTEND	
Voting Member	Teri.Kowalski@tema.toyota.com			
Dan Lanctot	Phone: (210) 690-1958	TEI	ATTEND	
Voting Member	dlanctot@tei-net.com			
Brian Marks	Phone: (973) 686-3325	BP Castrol		
Voting Member	Brian.Marks@bp.com			
Greg Miranda	Phone: (440) 347-8516	Lubrizol	ATTEND	
Voting Member	Greg.Miranda@Lubrizol.com			
Katerina	Phone: (804) 788-5214	Afton	ATTEND	
Pecinovsky	Katerina.Pecinovsky@AftonChemical.c	.com		
Voting Member				
Andy Ritchie	Phone: (908) 474-2097	Infineum	ATTEND	
Voting Member	Andrew.Ritchie@infineum.com	,		
Ron Romano	Phone: (313) 845-4068	Ford		
Voting Member	rromano@ford.com	· · · · · · · · · · · · · · · · · · ·		
Clifford Salvesen	Phone: (856) 224-2954	ExxonMobil	ATTEND	
Voting Member	Clifford.r.Salvesen@exxonmobil.com			
Kaustav Sinha	Phone: (713) 432-6642	Chevron	ATTEND	
Voting Member	LFNQ@chevron.com	Oronite		
Haiying Tang	Phone: (248) 512-0593	Chrysler		
Voting Member	HT146@Chrysler.com			
Dan Worcester	Phone: (210) 522-2405	SwRI	ATTEND	
Voting Member	Dan.Worcester@swri.org			

ASTM SEQUENCE VI			
Name	Email/Phone	Company	Attend

Ed Altman	Ed.Altman@aftonchemical.com	Afton	
Bill Anderson	Bill.anderson@aftonchemical.com	Afton	
Bob Campbell	Bob.Campbell@aftonchemical.com	Afton	
Lisa Dingwell	Lisa.Dingwell@AftonChemical.com	Afton	ATTEND
Todd Dvorak	Todd.Dvorak@aftonchemical.com	Afton	ATTEND
Dave Glaenzer	Dave.Glaenzer@aftonchemical.com	Afton	ATTEND
Greg Guinther	Greg.Guinther@aftonchemical.com	Afton	
Terry Hoffman	Terry.Hoffman@aftonchemical.com	Afton	
Christian Porter	Christian.Porter@aftonchemical.com	Afton	
Jeremy Styer	Jeremy.Styer@aftonchemical.com	Afton	
Timothy Caudill	Tlcaudill@valvoline.com	Valvoline	
Tisha Joy	Tisha.Joy@bp.com	BP	
Michael Blumenfeld	Michael.1.Blumenfeld@exxonmobil.com	EM	
	Phone: (856) 224.2865		
Don Smolenski	Donald.j.Smolenski@Evonik.com	Evonik	
Doyle Boese	Doyle.Boese@infineum.com	Infineum	ATTEND
	Phone: (908) 474-3176		
Gordon Farnsworth	Gordon.Farnsworth@infineum.com	Infineum	ATTEND
Charlie Leverett	Charlie.Leverett@yahoo.com	Infineum	ATTEND
	Phone: (210) 414-5448		
Mike McMillan	mmcmillan123@comcast.net	Infineum	ATTEND
Jordan Pastor	Jordan.Pastor@Infineum.com	Infineum	
	Phone: (313) 348-3120		
William Buscher	William.Buscher@intertek.com	Intertek	
Al Lopez	Al.Lopez@intertek.com	Intertek	
Addison Schweitzer	Addison.Schweitzer@intertek.com	Intertek	
Bob Olree	olree@netzero.net	Intertek	
Andy Buczynsky	Andrew.Buczynsky@gm.com	GM	
Thomas Hickl	Thomas.Hickl@de.gm.com	GM	
Jeff Kettman	Jeff.Kettman@gm.com	GM	
Jonas Leber	Jonas.Leber@opel.com	GM	
Mike Raney	Michael.P.Raney@gm.com	GM	
	Phone: (248) 408-5384		
Angela Willis	Angela.P.Willis@gm.com	GM	
Jerry Brys	Jerome.Brys@lubrizol.com	Lubrizol	ATTEND
	Phone: (440) 347.2631		
Jessica Buchanan	Jessica.Buchanan@Lubrizol.com	Lubrizol	
Joe Gleason	Jog1@lubrizol.com	Lubrizol	
James Matasik	James.Matasic@lubrizol.com	Lubrizol	

ASTM SEQUENCE VI

NameEmail/PhoneCompanyAttend

Nathan Moles	Nathan.Moles@Lubrizol.com	Lubrizol	
	Phone: (440) 347-4472		
Kevin O'Malley	Kevin.OMalley@lubrizol.com	Lubrizol	ATTEND
	Phone: (440) 347.4141		
Scott Rajala	srajala@ILAcorp.com	Idemitsu	
Dave Passmore	dpassmore@imtsind.com	IMTS	
Chris Castanien	Chris.Castanien@neste.com	Neste	
	Phone: (440) 290-9766		
Dwight Bowden	dhbowden@ohtech.com	OHT	
Matt Bowden	mjbowden@ohtech.com	OHT	ATTEND
Ricardo Affinito	affinito@chevron.com	Oronite	
	Phone: (510) 242-4625		
Ian Elliot	IanElliott@chevron.com	Oronite	
Jo Martinez	jogm@chevron.com	Oronite	ATTEND
Robert Stockwell	rsto@chevron.com	Oronite	ATTEND
Christine Eickstead	Christine.Eickstead@swri.org	SwRI	ATTEND
Travis Kostan	Travis.Kostan@swri.org	SwRI	ATTEND
Patrick Lang	Patrick.Lang@swRI.org	SwRI	ATTEND
	Phone: (210) 522-2820		
Michael Lochte	mlochte@swri.org	SwRI	
Karen Haumann	Karen.Haumann@shell.com	Shell	
Scott Stap	Scott.Stap@tgdirect.com	TG Direct	
Clayton Knight	cknight@tei-net.com	TEI	
Zack Bishop	zbishop@tei-net.com	TEI	
	Phone: (210) 877-0223		
Jeff Clark	jac@astmtmc.cmu.edu	TMC	
Hirano Satoshi	Satoshi_Hirano_aa@mail.toyota.co.jp	Toyota	
Jim Linden	lindenjim@jlindenconsulting.com	Toyota	
	Phone: (248) 321-5343		
Mark Adams	mark@tribologytesting.com	Tribology	
		Testing	
Tom Smith		Valvoline	
Hap Thompson	Hapjthom@aol.com	VIx Facilitator	ATTEND
Chris Taylor	Chris.Taylor@vpracingfuels.com	VP Racing	
-		Fuels	

ASTM SEQUENCE VI

Name	Email/Phone	C	Company			
	1			,		
VOTE						
Adrian Alfonso						
Voting Member						
Jason Bowden						
Voting Member						
Timothy Caudill						
Voting Member						
Tim Cushing						
Voting Member						
Rich Grundza						
Voting Member						
Jeff Hsu						
Voting Member						
Teri Kowalski						
Voting Member						
Dan Lanctot						
Voting Member						
Brian Marks						
Voting Member						
Greg Miranda						
Voting Member						
Katerina Pecinovsky						
Voting Member						
Andy Ritchie						
Voting Member						
Ron Romano						
Voting Member						
Clifford Salvesen						
Voting Member						
Kaustav Sinha						
Voting Member						
Haiying Tang						
Voting Member						
Dan Worcester						
Voting Member						

VIF Precision Matrix Analysis

Statistics Group January 11, 2017

Statistics Group

- Arthur Andrews, ExxonMobil
- Doyle Boese, Infineum
- Jo Martinez, Chevron Oronite
- Kevin O'Malley, Lubrizol
- Martin Chadwick, Intertek
- Richard Grundza, TMC
- Lisa Dingwell, Afton
- Todd Dvorak, Afton
- Travis Kostan, SwRI

Summary


- Analyses include the results of 18 valid precision matrix tests which reflects the surveillance panel's decisions
- Simulations suggest a change in baseline weighting could improve test precision (estimated standard deviation decreases as much as 0.02% (8% reduction) for FEI1; 0.02% (11% reduction) for FEI2)
- Analyses indicate that engines may not differentiate oils similarly
- These data suggest that second run tests may be the highest. In particular, higher than first run tests. This could have implications on the engine hours corrections, engine calibration, and/or severity adjustments
- It is not clear, based on the data obtained, whether a nonlinear type of engine hours correction or lack of consistency in oil discrimination across the engines and engine life or combination of these effects exists

Input is needed from the surveillance panel for analysis to proceed – some options are provided

PM Data for Analysis

• Precision Matrix (PM):

• On 11-7-16 the surveillance panel passed a motion to include 18 tests in the statistical analysis.

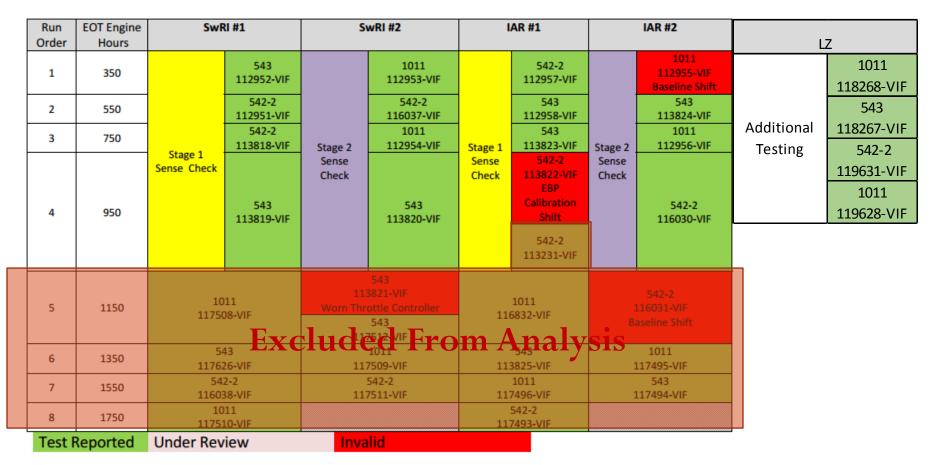


• Table is from Frank Faber's 6-21-16 matrix update plus 4 additional tests

- Excel Program developed to evaluate 10,000 different weight combinations of BLB1, BLB2, and BLA
- Excel based prediction model for precision (RMSE) included Lab, Eng(Lab), Oil, and EngHr factors
- All BL weight combinations summed to a value of 1.0
- For those runs that included a BLB3, BL weights were applied to BLB2 & BLB3 in lieu of BLB1 & BLB2
- Results are shown on the following slides


• Plot of RMSE vs. baseline (BL) weight combinations for FEI1 shown below:

- RMSE of weights can be interpreted from plot- if BL weights sum to 1.0
- VID & VIE FEI1 Baseline weights are 80% & 20% (shown in red circle)
- VIF test precision can be improved with weight factor of 1.0 for BLB2

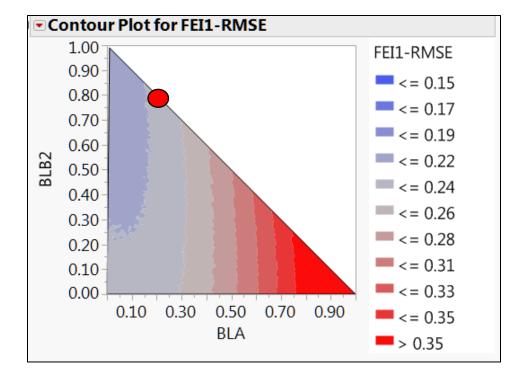


VIF Precision - BL Weights								
BLB1 BLB2 BLA FEI1-RMS								
0	0.8	0.2	0.2225					
0	1	0	0.2050					

- Plot of RMSE vs. BL weight combinations for FEI1-with 1st run data deleted is shown below (n = 14)
 - VID & VIE FEI1 Baseline weights are 80% & 20% (shown in red circle)
 - Traditional BL weights appear to be better suited for this reduced data set
 - BL shifts tend to be higher during first run tests & may affect the BL weights and RMSE

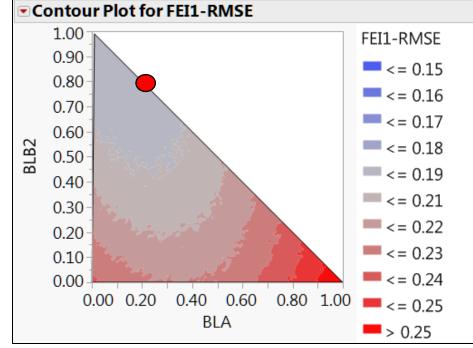


VIF Precision - BL Weights								
BLB1	BLB2	BLA	FEI1-RMSE					
0	0.8	0.2	0.1896					
0	1	0	0.1912					

- Plot of RMSE vs. baseline weight combinations for FEI2 shown below
 - RMSE of weights can be interpreted from plot- if BL weights sum to 1.0
 - VID & VIE FEI2 Baseline weights are 10% & 90% (shown in red circle)
 - Test precision can be decreased with other BL weighting combinations

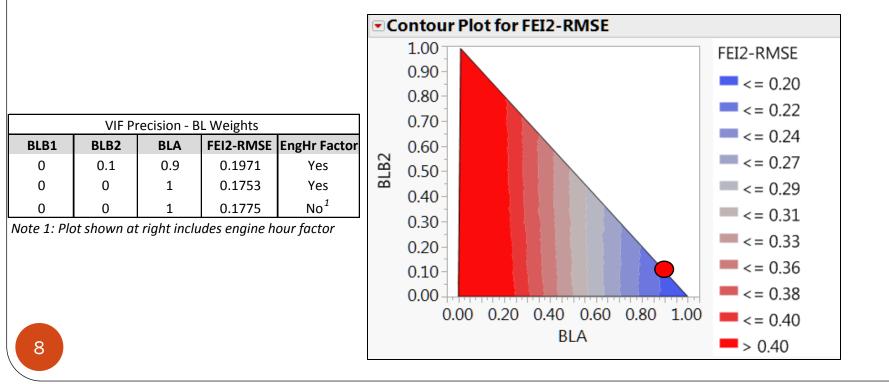


- Plot of RMSE vs. BL weight combinations for FEI2-with 1st run data deleted is shown below (n = 14)
 - VID & VIE FEI1 Baseline weights are 10% & 90% (shown in red circle)
 - Precision can be slightly improved with revised BL weights

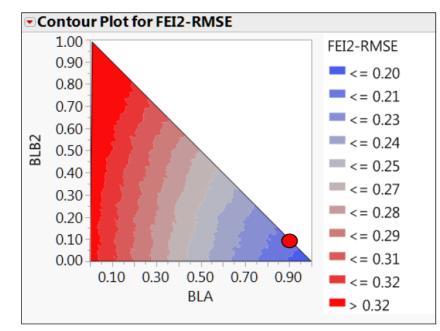

VIF Precision - BL Weights								
BLB1	BLB2	BLA	FEI2-RMSE					
0	0.1	0.9	0.2059					
0	0.0	1.0	0.1910					

Oil Discrimination Consistency – FEI1


- Engines do not appear to separate oils the same way, but caution should be used when basing conclusions on limited data.
- Similar differences are observed when baseline weights are used which improve test precision as shown in previous slides (100% BLB2 chosen as a representative)

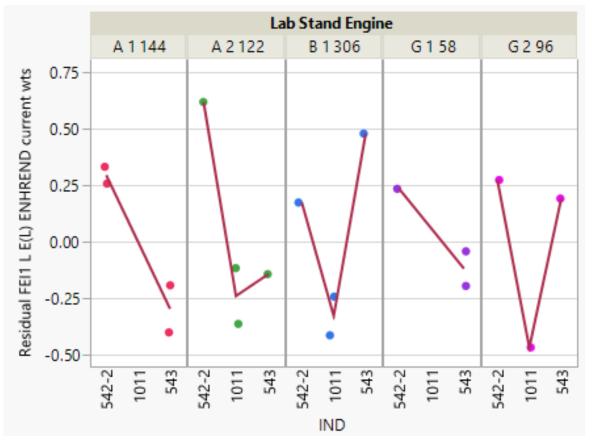

Plot assumes current/historical baseline weights: 80%BLB2 and 20% BLA Residuals are based on models with LTMSLAB, ENGNO(LTMSLAB), and ENHREND effects

Oil Discrimination Consistency – FEI2


- Engines do not appear to separate oils the same way, but caution should be used when basing conclusions on limited data.
- Similar differences are observed when baseline weights are used which improve test precision as shown in previous slides (100% BLA chosen as a representative)

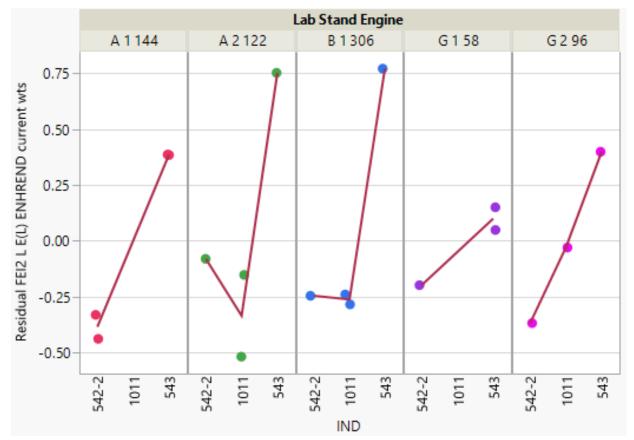

Plot assumes current/historical baseline weights: 10%BLB2 and 90% BLA Residuals are based on models with LTMSLAB, ENGNO(LTMSLAB), and ENHREND effects

Engine Hours Effect – FEI1


- The second tests run within engines are generally the highest (in particular, higher than the first test). This could have implications on the engine hours correction used and/or engine calibration/severity adjustments.
 - Engine hour corrections in this situation are viable See Appendix for one possibility
- Similar effect is observed when baseline weights are used which improve test precision as shown in previous slides (100% BLB2 chosen as a representative)

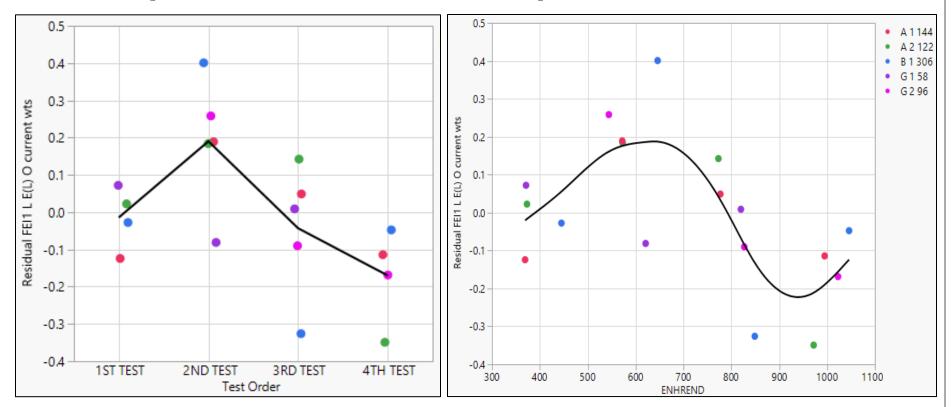

Plots assume current/historical baseline weights: 80%BLB2 and 20% BLA Residuals are based on models with LTMSLAB, ENGNO(LTMSLAB), and Oil effects

FEI2 - Engine Hours Effect

- For FEI2, 542-2 tends to have a different engine hours effect compared to the other oils
- Although the engine hour effects for oils in FEI1 don't significantly differ, it should be pointed out that the results of the second tests within engines have an influence on the observed engine hours trend. In particular, there is lack of 1011 data in this range of engine hours.

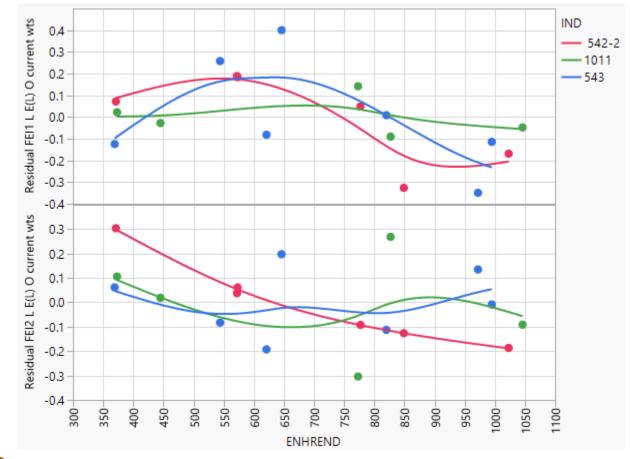


Similar FEI2 effect is observed when baseline weights are used which improve test precision as shown in previous slides (100% BLA chosen as a representative)

Plots assume current/historical baseline weights: 80%BLB2 and 20% BLA Residuals are based on models with LTMSLAB, ENGNO(LTMSLAB), and Oil effects

Evaluating Different FEI1 Modeling Scenarios

- Different FEI1 models¹ were evaluated by changing the Base Line Weights, Engine Hour effect coding, and elimination of 1st run test data.
 - For the full data set (*n*=18), the minimum RMSE corresponds to BL weights of 1.0 and 0.0 for BLB2 and BLA, respectively.
 - For the reduced data set (no first run data n=14), the minimum RMSE corresponds to the traditional BL weights of 0.8 and 0.2 for BLB2 and BLA, respectively.
 - A table of the various scenarios that were evaluated is provided below.

			BLB2	BLA	Model	Piece-Wise	EngHr	LSMeans		Contrast Significant (p < 0.0		(p <u><</u> 0.05)	
	Model	N Size	Weight	Weight	RMSE	EngHr	p value	RO_1011 (A)	RO_542-2 (<mark>B</mark>)	RO_543 (<mark>C</mark>)	A - B	A - C	B - C
	FEI1	18	0.8	0.2	0.2225	No	0.132	1.45	2.23	1.88	Yes	Yes	Yes
	FEI1	18	0.8	0.2	0.1965	Yes (Hrs=646)	0.031	1.47	2.22	1.87	Yes	Yes	Yes
No First Run	FEI1	14	0.8	0.2	0.1896	No	0.018	1.55	2.15	1.90	Yes	No	No
	FEI1	18	1.0	0.0	0.2050	No	0.001	1.47	2.22	1.89	Yes	Yes	Yes
	FEI1	18	1.0	0.0	0.1866	Yes (Hrs=646)	0.003	1.51	2.21	1.87	Yes	Yes	Yes
No First Run	FEI1	14	1.0	0.0	0.1912	No	0.009	1.52	2.08	1.87	Yes	No	No



Evaluating Different FEI2 Modeling Scenarios

- Different FEI2 models¹ were evaluated by changing the Base Line Weights, Engine Hour effect coding, and elimination of 1st run test data.
 - For the full data set (*n*=18), the minimum RMSE corresponds to BL weights of 0.0 and 1.0 for BLB2 and BLA, respectively.
 - For the reduced data set (no first run data n=14), the minimum RMSE corresponds to BL weight of 1.0 for BLA.
 - A table of the various scenarios that were evaluated is provided below.

			BLB2	BLA	Model	Piece-Wise	EngHr	LSMeans			Contrast Significant (p < 0.05)		(p <u><</u> 0.05)
	Model	N Size	Weight	Weight	RMSE	EngHr	p value	RO_1011 (A)	RO_542-2 (<mark>B</mark>)	RO_543 (<mark>C</mark>)	A - B	A - C	B - C
	FEI2	18	0.1	0.9	0.1971	No	0.208	1.41	1.52	2.25	No	Yes	Yes
	FEI2	18	0.1	0.9	0.2057	Yes (Hrs=646)	0.380	1.42	1.52	2.24	No	Yes	Yes
No EngHrs	FEI2	18	0.1	0.9	0.1941	No Hr Factor	N/A	1.37	1.42	2.26	No	Yes	Yes
No First Run	FEI2	14	0.1	0.9	0.2059	No	0.658	1.36	1.42	2.26	No	Yes	Yes
	FEI2	18	0.0	1.0	0.1753	No	0.569	1.40	1.52	2.24	No	Yes	Yes
	FEI2	18	0.0	1.0	0.1771	Yes (Hrs=646)	0.720	1.40	1.52	2.39	No	Yes	Yes
No EngHrs	FEI2	18	0.0	1.0	0.1775	No Hr Factor	N/A	1.37	1.45	2.27	No	Yes	Yes
No First Run	FEI2	14	0.0	1.0	0.1910	No	0.837	1.45	1.45	2.27	No	Yes	Yes



¹Models are based on LTMSLAB, ENGNO(LTMSLAB), and Engine Hour factors (Regular, Piecewise, and none)

Questions for the Surveillance Panel

- Should we treat the 1st run results differently than the remaining tests?
- Should we change the baseline weights?
- Should we pursue a non-linear engine correction factor?
- Should we consider tests beyond the first 4?
- Should we consider FEI2, exclusively?
- Should additional testing be pursued to understand which effect(s) are "real" (oil discrimination consistency across engines, oi discrimination across engine hours, and test order)?

Options:

1. In the opinion of the SP the VIF data indicates performance that was not taken into account during the matrix design. Additional test development or additional test data designed to better quantify these differences is necessary. The industry will consider redevelopment or the stats group will provide additional matrix runs in an attempt to help clarify the current concerns.

- Absolute Minimum (Engine 1: 542-2, 1011 and Engine 2: 543, 1011); 3 or 4 runs per engine is better
- Preferred (3 to 5 engines; 6 to 8 runs per engine; revised break-in?)

2. In the opinion of the SP the VIF may perform in a fundamentally different manner from the VIE. The analysis should take this into account and minimize the variability of the available VIF data set by considering different BL weights, engine hour correction calculation methods, run limitations, etc. with the understanding that individual data points will carry significant weight in determining these changes due to the small data set available.


3. In the opinion of the SP the VIF should be similar to the VIE and any disagreement between the VIE methods of analyzing the results with the VIF matrix data is caused by the small data set available for analysis. The VIF analysis should proceed using the same BL weights, engine hour correction calculation methods, run limitations, etc. as the VIE used.

- Engine referencing should include two tests
- Gather $5^{\rm th}\,run~(6^{\rm th}\,if$ we allow 3 candidates) data similar to the VIE
- Revisit assumptions with more data

APPENDIX

Engine Hours Effect – FEI1

- Based on a ¹residual analysis, piecewise engine hour adjustment may be a viable alternative for FEI1.
 - If EngHrEnd > 646 then *Trans_EngHrEnd* = (*EngHrEnd* 646)
 - If EngHrEnd \leq 646 then *Trans_EngHrEnd* = 0

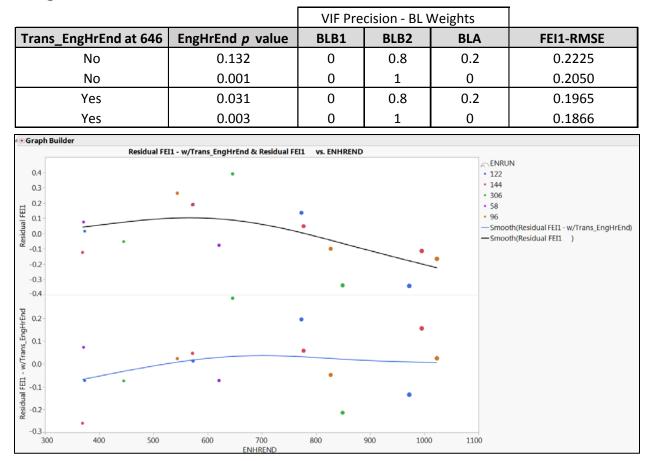

¹Residuals are based on models with LTMSLAB, ENGNO(LTMSLAB), and Oil effects